Register your product and get support at

www.philips.com/welcome

CD6950

User manual

Brugervejledning

Gebruiksaanwijzing

Brukerhåndbok

Käyttöopas

Användarhandbok

User manual

PHILIPS

Contents

1 Important safety instructions 3

2 Your phone 4
What is in the box 4
Overview of the phone 5
Main menu icons 6
Display icons 6

3 Get started 7
Connect the charger 7
Install the handset 7
Configure your phone (country dependent) 8
Change the remote access PIN code 9
Charge the handset 9
Check the battery level 9
What is standby mode? 9
Check the signal strength 10

4 Calls 11
Make a call 11
Make a call 11
Answer a call 11
End a call 12
Adjust the earpiece/speaker volume 12
Mute the microphone 12
Turn the speaker on or off 12
Make a second call 12
Answer a second call 12
Switch between two calls 12
Make a conference call with the external callers 13

5 Intercom and conference calls 14
Make a call to another handset 14
Transfer a call 14
Make a conference call 14

6 Text and numbers 16
Enter text and numbers 16
Switch between uppercase and lowercase 16

7 Phone settings 17
Set the date and time 17
ECO mode 17
Name the handset 17
Set the display language 17

8 Alarm clock 18
Set the alarm 18
Turn off the alarm 18

9 Display settings 19
Set the backlight of the LCD screen 19

10 Sound settings 20
Set the handset's ringtone volume 20
Set the handset's ringtone 20
Silent mode 20
Set the key tone 21
Set the docking tone 21
Set the sound profile 21

11 Services 22
Auto conference 22
Call barring 22
Call list type 22
Auto prefix 23
Network type 23
Select the recall duration 23
Dial mode 23
First ring 24
Auto clock 24
Register the handsets 24
Unregister the handsets 25
Call services 25
Restore default settings 26

12 Technical data 27

13 Notice 28
Declaration of conformity 28
Use GAP standard compliance 28
Compliance with EMF 28
Disposal of your old product and batteries 28

14 Frequently asked questions 30

15 Appendix 31
Text and number input tables 31

16 Index 33

1 Important safety instructions

Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.

Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction

Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

When using the phone as a baby monitor

Caution

- Children should be supervised to ensure that they do not play with the appliance.
- Make sure the baby unit and the cord are always out of reach of the baby (at least 1 metre/3 feet away).
- Keep the parent unit at least 1.5 metres/5 feet away from the baby unit to prevent acoustic feedback.
- Never place the baby unit inside the baby's bed or playpen.
- Never cover the parent unit and the baby unit with anything (e.g. a towel or blanket). Always make sure the cooling vents of the baby unit are free.
- Take every precaution to make sure that your baby can sleep safely .
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you place the parent unit next to a transmitter or other DECT appliance (e.g. a DECT telephone or wireless router for the internet), the connection with the baby unit may be lost. Move the baby monitor further away from the other wireless appliances until the connection is restored.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

2 Your phone

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What is in the box

Handset

Charger

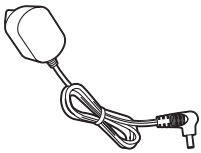

Power adapter

Warranty

User manual

Quick start guide

Note

- * In some countries, you have to connect the line adapter to the line cord, then plug the line cord into the telephone socket.

Overview of the phone

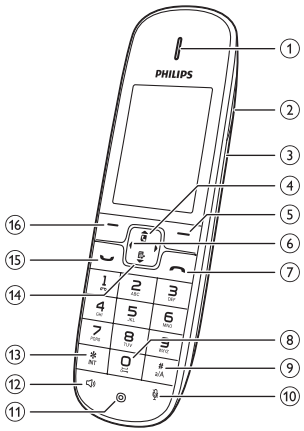

① **Earpiece**

② **Loudspeaker**

③ **Battery door**

④
- Scroll up on the menu.
- Increase the earpiece/speaker volume.
- Access the phonebook.

⑤
- Delete text or digits.
- Cancel operation.

⑥ ◀/▶
Move the cursor to the left or right in editing mode.

⑦
- End the call.
- Exit the menu/operation.

⑧ 0
- Press to enter a space during text editing.
- Press and hold to lock the keypad.

⑨ #
a/A
- Make a predial call.
- Press and hold to enter a pause when making a call.
- Switch to upper/lower case during editing.

⑩
Mute or unmute the microphone.

⑪ **Microphone**

⑫
- Turn the speaker phone is on or off.
- Make and receive calls through the speaker.

⑬ *
INT
Press and hold to make an intercom call (for multi handset version only).

⑭
- Scroll down on the menu.
- Decrease the earpiece/speaker volume.
- Access the call log.

⑮
- Make and receive calls.

⑯
- Access the main menu.
- Confirm selection.
- Enter the options menu.
- Select the function displayed on the handset screen directly above the key.

Main menu icons

The following is an overview of the menu options that are available in your CD690/695. For detailed explanation of the menu options, see the corresponding sections in this user manual.

Icon	Descriptions
	[Phone setup] - Set the date and time, ECO mode, handset name and display language.
	[Sounds] - Set the ring volume, ring tone, key tone etc.
	[Services] - Set the auto conference, auto prefix, network type, recall time, auto clock, call services etc. The services are network and country dependent.
	[Alarm] - Set date and time, alarm, alarm tone etc.
	[Phonebook] - You can access the function through this icon only when you register your handset to CD690/695.
	[Incoming calls] - Displays the call history of all missed or received calls.
	[Display] - Set the brightness, screen saver etc.
	[Baby monitor] - You can access the function through this icon only when you register your handset to CD690/695.
	[Intercom] - You can access the function through this icon only when you register your handset to CD690.
	[Answer machine] - You can access the function through this icon only when you register your handset to CD695.

Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the base station/charger, the bars indicate the battery level (from full to low). When the handset is on the base station/charger, the bars keep scrolling until charging is complete.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	The number of bars indicates the link status between the handset and base station. The more bars are shown, the better the signal strength is.
	It is red on the standby screen when there is a new missed call. It is red in the incoming call list when there is an unread missed call. It is green in the incoming call list when there is a read missed call.
	The alarm is activated.
	The speaker is on.
	The ringer is off.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.
	The silent mode is activated.
ECO	The **ECO** mode is activated.

3 Get started

Caution

- Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset.

Connect the charger

Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or underside of the phone.
- Use only the supplied power adapter to charge the batteries.

Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.. The filter prevents noise and caller ID problems caused by DSL interference. For further information on DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

Connect each end of the power adapter to (for multi handset versions only):

- the DC input jack at the bottom of the extra handset charger.
- the power socket on the wall.

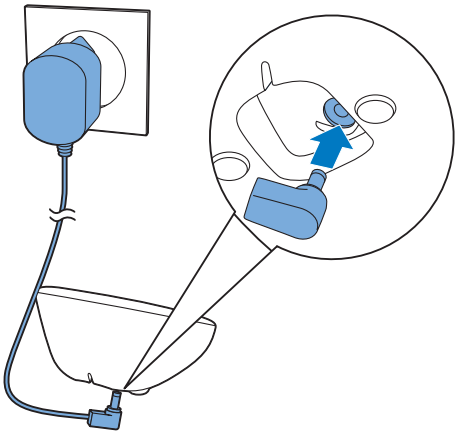

Install the handset

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

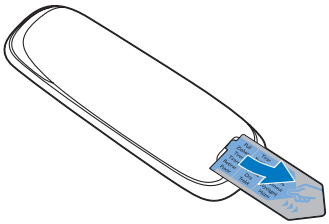

Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.

Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

Configure your phone (country dependent)

1 When using your phone for the first time, you see a welcome message.

2 Press **[OK]**.

Set the language

Select your language, then press **[OK]** to confirm.

↳ The language setting is saved.

To re-set the language, see the following steps.

1 Select **[Menu]** > ⚙ > **[Language]**, then press **[OK]** to confirm.

2 Select a language, then press **[OK]** to confirm.

↳ The setting is saved.

Set the date and time

1 Select **[Menu]** > ⚙ > **[Date & time]**, then press **[OK]** to confirm.

2 Select **[Set date]**/**[Set time]**, then press **[OK]** to confirm.

3 Press the numeric buttons to enter the date and time.

Note

- If the time is in 12-hour format, press * INT to select **[AM]** or **[PM]**.

4 Press **[OK]** to confirm.

Set the date and time format

1 Select **[Menu]** > ⚙ > **[Date & time]**, then press **[OK]** to confirm.

2 Select **[Date format]** or **[Time format]**.

3 Press ↑ / ↓ to select **[DD-MM-YYYY]** or **[MM-DD-YYYY]** as the date display, and **[12 Hours]** or **[24 Hours]** as the time display. Then press **[OK]** to confirm.

↳ The setting is saved.

Note

- The date and time format setting is country dependent.

Change the remote access PIN code

Note

- The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security.

1. Select **[Menu]** > ▭ > **[Remote access]** > **[Change PIN]**, then press **[OK]** to confirm.
2. Enter the old PIN, then press **[OK]** to confirm.
3. Enter the new PIN code, then press **[OK]** to confirm.
4. Enter the new PIN code again, then press **[Save]** to confirm.
   ↳ The setting is saved.

Charge the handset

Place the handset on the charging cradle to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.

Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

You can activate or deactivate the docking tone (see 'Set the docking tone' on page 21).
Your phone is now ready to use.

Check the battery level

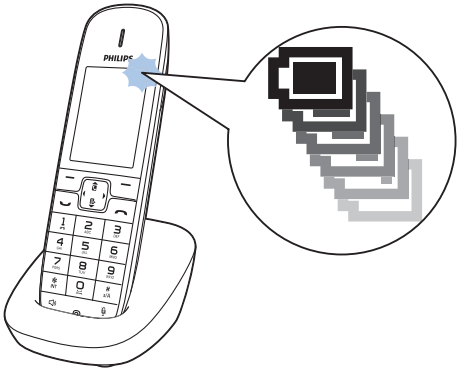

The battery icon displays the current battery level.

▭ ▭ ▭ ▭ ▭	When the handset is off the base station/charger, the bars indicate the battery level (from full to low). When the handset is on the base station/charger, the bars flash until charging is complete.
▭	The empty battery icon flashes. The battery is low and needs recharging.

If you are on the phone, you hear warning tones when the batteries are almost empty. The handset turns off when the batteries are completely empty.

What is standby mode?

Your phone is in standby mode when it is idle. When the handset is off the charging cradle, the standby screen displays the date and time. When the handset is on the charging cradle, the standby screen displays the time as a screen saver.

Check the signal strength

	The number of bars indicates the link status between the handset and base station. The more bars are shown, the better the connection is.

- Make sure the handset is linked to the base station before you make or receive calls and carry out the functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset close to the base station.

4 Calls

Note

- When the power fails, the phone cannot access emergency services.

Tip

- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 10).

Make a call

You can make a call in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log

Make a call

You can make a call in these ways:

- Quick call
- Dial before you call

Tip

- For information of how to make a call from the redial list, phonebook list and call log, see the base station's user manual.

Quick call

1 Press ✆ or 🔊.

2 Dial the phone number.

↳ The number is dialed out.

↳ The duration of your current call is displayed.

Dial before you call

1 Dial the phone number

- To erase a digit, press **[Clear]**.
- To enter a pause, press and hold #/a/A.

2 Press ✆ or 🔊 to dial out the call.

Note

- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

Note

- The call timer displays the talk time of your current call.

Answer a call

When there is an incoming call, the phone rings and the LCD backlight flashes. Then you can:

- press ✆ or 🔊 to answer the call.
- select **[Divert]** to send incoming call to the answering machine (only applied to CD695).
- select **[Silent]** to turn off the ringer of the current incoming call.

Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.

Tip

- When there is a missed call, a notification message appears.

English

Turn off the ringer for an incoming call

When the phone rings, press **[Silent]**.

End a call

You can end a call in these ways:

- Press ; or
- Place the handset to the base station or charging cradle.

Adjust the earpiece/speaker volume

Press / on the handset to adjust the volume during a call.

↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

Mute the microphone

1 Press during a call.
↳ The handset displays **[Mute on]**.
↳ The caller cannot hear you, but you can still hear his voice.

2 Press again to unmute the microphone.
↳ You can now communicate with the caller.

Turn the speaker on or off

Press .

Make a second call

Note

- This service is network dependent.

1 Press during a call.
↳ The first call is put on hold.

2 Dial the second number.
↳ The number displayed on the screen is dialed out.

Answer a second call

Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

1 Press and 2 ABC to answer the call.
↳ The first call is put on hold, and you are now connected to the second call.

2 Press and 1 to end the current call and answer the first call.

Switch between two calls

Note

- This service is network dependent.

You can switch your calls in these ways:

- Press and 2 ABC ; or
- Press **[Option]** and select **[Switch calls]**, then press **[OK]** again to confirm.
  ↳ The current call is put on hold, and you are now connected to the other call.

Make a conference call with the external callers

Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call in these ways:

- Press ⌣, then 3 DEF ; or
- Press **[Option]**, select **[Conference]** and then press **[OK]** again to confirm.
  ↳ The two calls are combined and a conference call is established.

5 Intercom and conference calls

Make sure that all the handsets registered to the base station are **Philips CD69** models in order to have this feature functioning properly.

Make a call to another handset

Note

- If the base station only has 2 registered handsets, press and hold * INT or select **[Menu]** > to make a call to another handset.
- The icon is only available in CD690.

1 Press and hold * INT or select **[Menu]** > .
   ↳ The handsets available for intercom are displayed.

2 Select a handset number, then press **[OK]** to confirm.
   ↳ The selected handset rings.

3 Press on the selected handset.
   ↳ The intercom is established.

4 Press **[Cancel]** or to cancel or end the intercom call.

Note

- If the selected handset is busy, **[Busy]** is displayed on the handset screen.

While you are on the phone

You can go from one handset to another during a call:

1 Press and hold * INT.
   ↳ The current caller is put on hold.

2 Select a handset number, then press **[OK]** to confirm.
   ↳ Wait for the other side to answer your call.

Switch between calls

Press **[Extern]** to switch between the outside call and the intercom call.

Transfer a call

1 Press and hold * INT during a call.
   ↳ The handsets available for intercom are displayed.

2 Select a handset number, then press **[OK]** to confirm.

3 Press when the other side answers your call.
   ↳ The call is now transferred to the selected handset.

Make a conference call

A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

During an external call

1 Press and hold * INT to initiate an internal call.
↳ The handsets available for intercom are displayed.
↳ The external caller is put on hold.

2 Select or enter a handset number, then press **[OK]** to confirm.
↳ The selected handset rings.

3 Press ✆ on the selected handset.
↳ The intercom is established.

4 Press **[Conf]**.
↳ You are now in a 3-way conference call with an external call and a selected handset.

5 Press ✆ to end the conference call.

Note

- Press ✆ to join an ongoing conference with another handset if **[Services]** > **[Conference]** is set to **[Auto]**.

During the conference call

- Press **[Int.]** to put the external call on hold and go back to the internal call.
  ↳ The external call is put on hold.
- Press **[Conf]** to establish the conference call again.

Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and numbers

1 Press once or several times on the alphanumeric key to enter the selected character.

2 Press **[Clear]** to delete the character. Press ◀ / ▶ to move the cursor left and right.

3 Press 0 to add a space.

Tip

- For further information on the text and number input, see the chapter 'Appendix'.

Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press # a/A to switch between the uppercase and lowercase letters.

7 Phone settings

You can customize the settings to make it your own phone.
Make sure that all the handsets registered to the base station are **Philips CD69** models in order to have this feature functioning properly.

Set the date and time

For further information, see chapter 'Get started', sections 'Set the date and time' and 'Set the date and time format'.

ECO mode

The **ECO** mode reduces the transmission power of the handset and base station when you are on a call or when the phone is in standby mode.

1. Select **[Menu]** > ⚙ > **[Eco mode]**, then press **[OK]** to confirm.
2. Select **[On]**/**[Off]**, and press **[OK]** to confirm.
   ↳ The setting is saved.
   ↳ **ECO** is displayed in standby mode.

Note

- When **ECO** is set to **[On]**, the connection range between the handset and the base station can be reduced.

Name the handset

The name of the handset can be up to 14 characters. It is displayed on the handset screen in standby mode.

1. Select **[Menu]** > ⚙ > **[Phone name]**, then press **[OK]** to confirm.
2. Enter or edit the name. To erase a character, select **[Clear]**.
3. Press **[Save]** to confirm.
   ↳ The setting is saved.

Set the display language

Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

1. Select **[Menu]** > ⚙ > **[Language]**, then press **[OK]** to confirm.
2. Select a language, then press **[OK]** to confirm.
   ↳ The setting is saved.

English

8 Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

Set the alarm

1. Select **[Menu]** > , then press **[OK]** to confirm.
2. Select **[On]**/**[Off]**, then press **[OK]** to confirm.
3. Select **[Alarm time]**, then press **[OK]** to confirm.
4. Enter an alarm time, then press **[OK]** to confirm.
5. Select **[Repetition]**, then press **[OK]** to confirm.
6. Select an alarm occurrence, then press **[OK]** to confirm.
7. Select **[Alarm tone]**, then press **[OK]**.
8. Select a tone from options, then press **[OK]** to confirm.
   ↳ The alarm is set and is displayed on the screen.

Tip

- Press * INT to switch between **[AM]**/**[PM]**.

Turn off the alarm

Before the alarm rings

Select **[Menu]** > > **[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

When the alarm rings

- Press**[Off]** to turn off the alarm.
- Press **[Snooze]**(or any key except **[Off]**) to snooze.
  ↳ The alarm rings again after 5 minutes. After you snooze it for 3 times, the snooze function is off.

9 Display settings

You can change the brightness of the phone display and type of clock display during standby mode.

Set the display

1 Select **[Menu]** > ⚙, then press **[OK]** to confirm.
2 Select **[Brightness]**/**[Clock]**, then press **[OK]** to confirm.
3 Select an option, then press **[OK]** to confirm.

Set the backlight of the LCD screen

You can set the backlight of the LCD screen and keypad flashing on or off when the phone rings.

1 Select **[Menu]** > ⚙, then press **[OK]** to confirm.
2 Select **[Visual alert]**, then press **[OK]** to confirm.
3 Select **[Flashing on]**/**[Flashing off]**, then press **[OK]** to confirm.
↳ The setting is saved.

10 Sound settings

You can customize the sound settings of your phone.
Make sure that all the handsets registered to the base station are **Philips CD69** models in order to have this feature functioning properly.

Set the handset's ringtone volume

You can select among 5 ringtone volume levels or **[Off]**.

1. Select **[Menu]** > , then press **[OK]** to confirm.
2. Select **[Ring volume]**, then press **[OK]** to confirm.
3. Select a volume level, then press **[OK]** to confirm.
   ↳ The setting is saved.

Tip

- When you turn the ringtone off, displays on the screen.

Set the handset's ringtone

You can select from 15 ringtones.

1. Select **[Menu]** > , press **[OK]** to confirm.
2. Select **[Ring tones]**, then press **[OK]** to confirm.
3. Select a ringtone, then press **[OK]** to confirm.
   ↳ The setting is saved.

Silent mode

You can set your phone to silent mode and enable it for a specific duration when you do not want to be disturbed. When the silent mode is turned on, your phone does not ring or send any alerts or sound.

Note

- When you press to find your handset, or when you activate the alarm, your phone still sends alert even when the silent mode is activated.

1. Select **[Menu]** > , press **[OK]** to confirm.
2. Select **[Silent mode]**, then press **[OK]** to confirm.
3. Select **[On]**/**[Off]**, then press **[OK]** to confirm.
   ↳ The setting is saved.
4. Select **[Start & end]**, then press **[OK]** to confirm.
5. Set the time, then press **[OK]** to confirm.
   ↳ The setting is saved.

Note

- When the silent mode is set to **[On]**, is displayed. is displayed during the preset time for the silent mode.

Exclude the contacts from silent mode

You can select the length of ring delay and set the contacts to be excluded from the phonebook. Ring delay is the number of rings that will be muted before the rings become audible on the phone.

1. Select **[Menu]** > 🔊 > **[Silent mode]**, then press **[OK]** to confirm.
2. Select **[Exception]**.
3. Select **[On]** to activate, or **[Off]** to deactivate the silent mode, then press **[OK]** to confirm.
4. Select **[Ring delay]**, then select an option.
5. press **[OK]** to confirm.
   ↳ The setting is saved.

Note

- If **[Exception]** is set to **[On]** and **[Ring delay]** option is selected, the handset rings only after length of ring delay selected is reached.
- Make sure that the contact under the **[Set exception]** option of the phonebook menu is set to **[On]** before you can exclude this contact from the silent mode.

Set the key tone

Key tone is the sound made when you press a key on the handset.

1. Select **[Menu]** > 🔊, press **[OK]** to confirm.
2. Select **[Key tone]**, then press **[OK]** to confirm.
3. Select **[On]**/**[Off]**, then press **[OK]** to confirm.
   ↳ The setting is saved.

Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger.

1. Select **[Menu]** > 🔊, press **[OK]** to confirm.
2. Select **[Docking tone]**, then press **[OK]** to confirm.
3. Select **[On]**/**[Off]**, then press **[OK]** to confirm.
   ↳ The setting is saved.

Set the sound profile

You can set the sound in the earpiece among 3 different profiles.

1. Select **[Menu]** > 🔊, press **[OK]** to confirm.
2. Select **[My sound]**, then press **[OK]** to confirm.
3. Select your preferred profile, then press **[OK]** to confirm.
   ↳ The setting is saved.

Access the sound profile during a call

1. Press **[Sound]** for once or several times to change the sound profile during a call.

11 Services

The phone supports a number of features that help you handle and manage the calls.
Make sure that all the handsets registered to the base station are **Philips CD69** models in order to have this feature functioning properly.

Auto conference

To join an external call with another handset, press .

Activate/Deactivate auto conference

1. Select **[Menu]** > ▤ > **[Conference]**, then press **[OK]** to confirm.
2. Select **[Auto]**/**[Off]**, then press **[OK]** to confirm.
   ↳ The setting is saved.

Call barring

You can restrict the phone from making specific outgoing calls.

Select the barring mode

1. Select **[Menu]** > ▤ > **[Call barring]** > **[Barring mode]** then press **[OK]** to confirm.
2. Enter the PIN. The default PIN is 0000.
3. Select **[On]**/**[Off]**, then press **[OK]** to confirm.
   ↳ The setting is saved.

Add new number to the barred list

1. Select **[Menu]** > ▤ > **[Call barring]** > **[Barring number]**, then press **[OK]** to confirm.
2. Enter the PIN. The default PIN is 0000.
3. Select a number from the list, then press **[OK]** to confirm.
   ↳ The setting is saved.

Note

- The number in the barred list can still be sent as an external line for a baby call.

Change the PIN

1. Select **[Menu]** > ▤ > **[Call barring]** > **[Change PIN]**, then press **[OK]** to confirm.
2. Enter the old PIN, then press **[OK]** to confirm.
3. Enter the new PIN, then press **[OK]** to confirm.
4. Enter the new PIN again, then press **[Save]** to confirm.
   ↳ The setting is saved.

Call list type

You can view all incoming calls or missed calls from this menu.

Select the call list type

1. Select **[Menu]** > ▤ > **[Call list type]**, then press **[OK]** to confirm.
2. Select an option, then press **[OK]** to confirm.

Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

Note

- This is a country dependent feature.

Set auto prefix

1. Select **[Menu]** > ▤ > **[Auto prefix]**, then press **[OK]** to confirm.
2. Enter the detect number, then press **[OK]** to confirm.
3. Enter the prefix number, then press **[OK]** to confirm.
   ↳ The setting is saved.

Note

- To enter a pause, press and hold #a/A.

Note

- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.

Note

- The feature is unavailable if the dialed number starts with * and #.

Network type

Note

- This feature only applies to models with network type support.

1. Select **[Menu]** > ▤ > **[Network type]**, then press **[OK]**.
2. Select a network type, then press **[OK]**.
   ↳ The setting is saved.

Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider.

1. Select **[Menu]** > ▤ > **[Recall time]**, then press **[OK]** to confirm.
2. Select an option, then press **[OK]** to confirm.
   ↳ The setting is saved.

Dial mode

Note

- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Set the dial mode

1 Select **[Menu]** > ▤ > **[Dial mode]**, then press **[OK]** to confirm.

2 Select a dial mode, then press **[OK]** to confirm.
↳ The setting is saved.

Note

- If your phone is in pulse dial mode, press ✱ INT during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

First ring

If you have subscribed to the caller ID service with your service provider, your phone can cancel the first ring before the caller ID is displayed on the screen. After the phone is reset, it can detect automatically if there is a caller subscription and start to cancel the first ring. You can change this setting to suit your preference. This feature only applies to models with first ring support.

Turn the first ring on/off

1 Select **[Menu]** > ▤ > **[First ring]**, then press **[OK]** to confirm.

2 Select **[On]**/**[Off]**, press **[OK]** to confirm.
↳ The setting is saved.

Note

- To reset the first ring status, go to the reset menu.

Auto clock

Note

- This service is network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

1 Select **[Menu]** > ▤ > **[Auto clock]**, then press **[OK]** to confirm.

2 Select **[On]**/**[Off]** . Press **[OK]**.
↳ The setting is saved. .

Register the handsets

You can register additional handsets to the base station. The base station can register up to 5 handsets.

Auto registration

Place the unregistered handset on the base station.

↳ The handset detects the base station and registers automatically.

↳ Registration is completed in less than two minutes. The base station automatically assigns a handset number to the handset.

Manual registration

If auto registration fails, register your handset manually to the base station.

1 Select **[Menu]** > ☰ > **[Register]**, then press **[OK]** to confirm.

2 Press and hold •)) on the base station for 5 seconds.

Note

- For models with an answering machine, you hear a confirmation beep.

3 Enter the system PIN. Press **[Clear]** to make corrections.

4 Press **[OK]** to confirm the PIN.
↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.

Note

- The preset PIN is 0000. No change can be made on it.

Unregister the handsets

1 If two handsets share the same base station, you can unregister a handset with another handset.

2 Select **[Menu]** > ☰ > **[Unregister]**, then press **[OK]** to confirm.

3 Select the handset number to be unregistered.

4 Press **[OK]** to confirm.
↳ The handset is unregistered.

Tip

- The handset number displays beside the handset name in standby mode.

Call services

The call services are network and country dependent. Contact your service provider for more information.

Note

- For the call services to work properly, make sure that the activation and/or deactivation codes are correctly entered.

Call forward

You can divert your calls to another phone number. You can select among 3 options:

- **[Call forward]**: divert all incoming calls to another number.
- **[Call fwd busy]**: divert calls when the line is busy.
- **[Call fwd unans]**: divert calls when no one answers.

Activate/Deactivate call forward

1 Select **[Menu]** > ☰ > **[Call Services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**

2 Select **[Activate]/[Deactivate]**, then press **[OK]** to confirm.

3 Enter the telephone number.
↳ The setting is saved .

Edit the activation/deactivation code

You can edit the prefix and suffix to the call forward codes.

1. Select **[Menu]** > ▤ > **[Call Services]** > **[Call forward]**/**[Call fwd busy]**/**[Call fwd unans]**, then press **[OK]** to confirm.
2. Select **[Change code]**, then press **[OK]**.
3. Then you can either
   - Select **[Activation]** > **[Prefix]**/**[Suffix]**, then press **[OK]** to confirm; or
   - Select **[Deactivation]**, then press **[OK]** to confirm.
4. Enter or edit the code, then press **[OK]** to confirm.
   ↳ The setting is saved.

Call return

You can check the most recent unanswered call.

Call the return service centre

Select **[Menu]** > ▤ > **[Call Services]** > **[Call return]** > **[Call]**, then press **[OK]** to confirm.

↳ Your call is made to the service center.

Edit the call return service centre number

1. Select **[Menu]** > ▤ > **[Call Services]** > **[Call return]** > **[Settings]**, then press **[OK]** to confirm.
2. Enter or edit the number, then press **[OK]** to confirm.
   ↳ The setting is saved.

Call back service

The call back service notifies you when a party you have tried to call becomes available. You can cancel this service from the menu after you have activated it from the service provider.

Cancel the call back service

Select **[Menu]** > ▤ > **[Call Services]** > **[Cancel call bk]** > **[Call]**, then press **[OK]** to confirm.

↳ A call is made to the service centre to cancel the call back option.

Edit the cancel call back service number

1. Select **[Menu]** > ▤ > **[Call Services]** > **[Cancel call bk]** > **[Settings]**, then press **[OK]** to confirm.
2. Enter or edit the number, then press **[OK]** to confirm.
   ↳ The setting is saved.

Hide your identity

You can hide your identity from the caller.

Activate ID withheld

Select **[Menu]** > ▤ > **[Call Services]** > **[Hide my ID]** > **[Activate]**, then press **[OK]** to confirm.

↳ When you make a call to your contact, your ID is withheld.

Edit the ID withheld code

1. Select **[Menu]** > ▤ > **[Call Services]** > **[Hide my ID]** > **[Settings]**, then press **[OK]** to confirm.
2. Enter or edit the number, then press **[OK]** to confirm.
   ↳ The setting is saved.

Restore default settings

You can reset your phone settings to the original factory settings.

1. Select **[Menu]** > ▤ > **[Reset]**, then press **[OK]** to confirm.
   ↳ The handset displays a confirmation request.
2. Press **[OK]** to confirm.
   ↳ All settings are reset.

12 Technical data

Display

- 24 color TFT display

General telephone features

- Dual mode caller name & number identification
- Conference call and voicemails
- Intercom
- Maximum talk time: 22 hours

Battery

- CORUN: 2 x AAA Ni-MH 1.2V 600mAh rechargeable batteries
- BYD: 2 x AAA Ni-MH 1.2V 600mAh rechargeable batteries
- GPI: 2 x AAA Ni-MH 1.2V 600mAh rechargeable batteries

Power adapter

Base and charger

- Philips, SSW-2095EU-1, input: 100-240Vac, 50-60Hz 0.2A, output: 5V 600mA
- Philips, S003PV0500060, input:100-240Vac, 50-60Hz 0.2A, output 5V 600mA

Power consumption

- Power consumption at standby mode: around 0.5 W (CD690); 0.55 W (CD695)

Note

- It only applies when the screen saver is turned off (see 'Display settings' on page 19).

Weight and dimensions (CD690)

- Handset: 145 grams
- 167.4 x 49.24 x 27.08 mm (H x W x D)
- Charger: 56.8 grams
- 94.47 x 82.03 x 53.04 mm (H x W x D)

Weight and dimensions (CD695)

- Handset: 145 grams
- 167.4 x 49.24 x 27.08 mm (H x W x D)
- Charger: 56.8 grams
- 94.47 x 82.03 x 53.04 mm (H x W x D)

13 Notice

Declaration of conformity

Hereby Philips Consumer Lifestyle, declares that the CD690/695 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.
This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC.

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.
Please act according to your local rules and do not dispose of your old products with your normal household waste.
Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)
Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

14 Frequently asked questions

No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Unregister]**, put the handset on the base until the signal bar appears.

Tip

- For further information, see 'Register the handsets' on the Services section.

If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

No docking tone

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

No display

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Make sure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

15 Appendix

Text and number input tables

Key	Upper case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/Swedish)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	A B C 2 À Â Æ Á Ã Ä Å Ç
3	D E F 3 È É Ê Ë Δ Φ
4	G H I 4 Ğ Í Ï İ Γ
5	J K L 5 Λ
6	M N O 6 Ñ Ó Ô Õ Ö
7	P Q R S 7 Ş Π Θ Σ
8	T U V 8 Ù Ú Ü
9	W X Y Z 9 Ø Ω Ξ Ψ

Key	Lower case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/Swedish)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	a b c 2 à â æ á ã ä å ç
3	d e f 3 è é ê ë Δ Φ
4	g h i 4 ğ í ì ï ı Γ
5	j k l 5 Λ
6	m n o 6 ñ ó ô õ ö ò
7	p q r s 7 β ş Π Θ Σ
8	t u v 8 ù ú ü µ
9	w x y z 9 ø Ω Ξ Ψ

Key	Upper case characters (for Greek)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	A B Γ 2 A B C Æ Ä Å Ç
3	Δ E Z 3 D E F É
4	H Θ I 4 G H I
5	K Λ M 5 J K L
6	N Ξ O 6 M N O Ñ Ö
7	Π P Σ 7 P Q R S
8	T Y Φ 8 T U V Ü
9	X Ψ Ω 9 W X Y Z Ø

Key	Lower case characters (for Greek)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	α β γ 2 a b c à æ ä å
3	δ ε ζ 3 d e f è é
4	η θ ι 4 g h i ì
5	κ λ μ 5 j k l Λ
6	ν ξ ο 6 m n o ñ ö ò
7	π ρ σ ς 7 p q r s ß
8	τ υ φ 8 t u v ù ü
9	χ ψ ω 9 w x y z ø

Key	Upper case characters (for Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	A B C 2 Â Æ Á Ă Ä Å Ą Ç Ć Č
3	D E F 3 Ď Đ Ė Ě É Ę Δ Φ
4	G H I 4 Í Î Γ
5	J K L 5 Λ Ł Ĺ Ľ
6	M N O 6 Ñ Ň Ń Ó Ö Ő
7	P Q R S 7 Ř Ş Š Ś Π Θ Σ
8	T U V 8 Ţ Ť Ú Û Ü Ů Ű Ű
9	W X Y Z 9 Ý Ž Ź Ż ſ Ø Ω Ξ Ψ

Key	Lower case characters (for Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	a b c 2 à â æ á ă ä å ą ć č
3	d e f 3 ď đ ė ě è é ę Δ Φ
4	g h i 4 í ì Γ
5	j k l 5 Λ
6	m n o 6 ñ ň ó ö ő ò
7	p q r s 7 ř š ś Π Θ Σ ß
8	t u v 8 ţ ť ù ú û ü ů ǔ ű
9	w x y z 9 ý ž ƒ ø Ω Ξ Ψ

Key	Upper case characters (for Serbian/ Bulgarian)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	A Б B Г Ъ Ć Č 2 A B C Æ Ä Å Ç
3	Д E Ж З J Ð 3 D E F É Δ Φ
4	И Й K Λ Љ 4 G H I Г
5	M H O П Њ 5 J K L Λ
6	P C T У Ћ 6 M N O Ñ Ö
7	Ф X Ц Ч Ж 7 P Q R S Π Θ Σ
8	Ш Щ Ъ Ы 8 T U V Ü
9	Ь Э Ю Я Ž 9 W X Y Z Ø Ω Ξ Ψ

Key	Lower case characters (for Serbian/ Bulgarian)
0	Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |
1	1 @ _ # = < > ( ) & € £ $ ¥ [ ] { } ¤ § …
2	a b c 2 à æ ä å
3	d e f 3 è é Δ Φ
4	g h i 4 ì Γ
5	j k l 5 Λ
6	m n o 6 ñ ö ò
7	p q r s 7 Π Θ Σ ß
8	t u v 8 ù ü
9	x y z 9 ø Ω Ξ Ψ

16 Index

A
additional handsets 24
alarm 18
answer a call 11
auto clock 24
auto conference 22
auto prefix 23

B
battery 7, 9, 27

C
call back service 26
call barring 22
call forward service 25
call return 26
caller ID 11, 24
calling 11
conference call 13, 14, 22

D
date setting 8, 24
default settings 26
dial mode 23
display icons 6
display settings 19
disposal 28

E
ECO mode 17

F
first ring 24

G
GAP 28

H
hide own call 26

I
intercom 14
internal call 14

L
language setting
  handset 17

M
mute 12

N
name the handset 17
network type 23

O
overview 5

P
phone settings 17
PIN
  calling barring 22
  registration 25
power adapter 27

R
recall time 23
register/unregister 24, 25
ringtone 20

S

safety 3
signal strength 10
silent mode 20
sounds
  docking 21
  keytone 21
  sound profile 21
speaker phone 12
standby mode 9

T

text entry 16, 31
time setting 8, 24
transfer call 14
troubleshooting/FAQ 30
two calls/call on hold 12

V

volume adjustment 12

CE 0168

Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

UM_CD6950_12_Book1_V1.0
WK12022